

CREDIT CARD DUAL

USER MANUAL

(2014/53/EU art. 10-8) (2014/53/EU art. 10-9 Simplified Declaration of Conformity)
C Two Products AB hereby declares that this product complies with the essential requirements and other relevant conditions of directive 2014/53/EU. The complete EU Declaration of Conformity is available at: usb.nu - search on article number:
Article no: 11357 Model: HD-P16-E
Frequency Range 2402-2480 MHz/
Max radio-frequency power: 2.02 dBm



Electrical and electronic devices must not be disposed of with household waste according to the European WEEE directive. Their components must be recycled or disposed of separately because of toxic and hazardous components, if improperly disposed, it can cause lasting damage to health and the environment. As a consumer, you are required under the Electrical and Electronic Equipment Act (ElektroG) to dispose of electrical and electronic equipment properly at the end of its service life. Contact your local waste disposal company.
With the CE mark we declare that the product is the basic Requirements and guidelines of European regulations.

C Two Products AB
Ridbanegatan 4, 213 77 Malmö, Sweden
Made in China



SYSTEM REQUIREMENTS:



iOS® 14.5 and iPhone® 6S above



Android 9 or higher

USE WITH APPLE'S FIND MY APP (APPLE USERS ONLY)

You can add your Credit Card Dual to Find My on your iPhone or iPad. When you've left something behind, the Find My network - hundreds of millions of connected devices around the world - helps you track down your device. And it protects your privacy at every step.

SPECIFICATION

Product Material: Aluminium alloy


Battery Type: Polymer battery

Rated Capacity: 100mAh

Wireless Rechargeable: 5W

Battery life per charge: 4-6 months

Size: 85x54x2.6mm

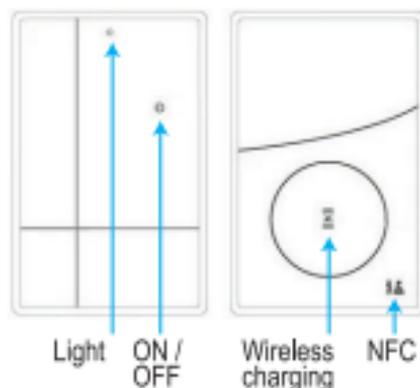

NFC INSTRUCTIONS


Just like your other Apple devices, this card can be put into Lost Mode. Then, when it's detected by a iOS device in the network, you'll automatically get a notification. You can also set it so someone can get your contact info by tapping your Credit Card Dual with an NFC-capable smartphone that's the same technology that lets people pay for things with their phones.



Only you can see where your Credit Card Dual is. Your location data and history are never stored on the card itself. Devices that relay the location of your card also stay anonymous, and that location data is encrypted every step of the way. So not even Apple knows the location of your Credit Card Dual or the identity of the device that helps find it.

WIRELESS RECHARGE

1. Place the card properly onto the Wireless Charger, please make sure to align the charging port (⚡) of your card to the center of the Wireless Charger.
2. The Light will keep flashing green after wireless charging starts, if not, please adjust the cards position accordingly.

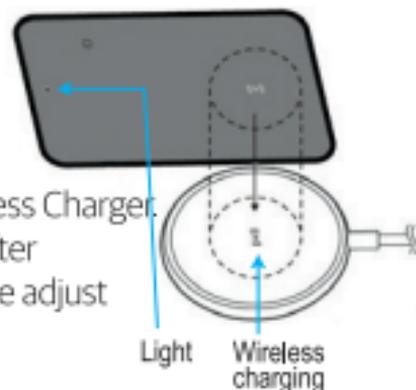

LIGHT INDICATOR

Switch on/off	Blue light flashes for on, flashes twice for off
Wireless Charging	Red light keeps on
Fully Charged	Light turns off
Reset	Blue light flashes

BEFORE CONNECTING

- An iPhone or iPad with iOS 14.5 or iPadOS 14.5 or later.
- Apple ID logged in.
- **Find My** enabled.
- Bluetooth turned on.
- A strong Wi-Fi or cellular connection.
- Location Services turned on: Go to Settings > Privacy > Location Services.
- To use Precision Finding to get the most accurate location for your Credit Card Dual, turn on Location Access for **Find My**. Go to **Settings > Privacy > Location Services**, then scroll down and tap Find My. Check **While Using the App / While Using the App or Widgets**, then turn on Precision Location.

ADD YOUR DEVICE

1. Click the button on your card and you will hear a tone.
2. Open the Find My app, tap +, then tap Add Other item.
3. Tap connect, enter a name and choose an emoji for your Credit Card Dual and tap Continue.

4. To register the card with your Apple ID, tap Continue again.
5. Tap Done, now you can attach your card to an item and see it in the Find My app.

If you can't set up your Credit Card Dual:

- Make sure that your card is ready for setup, check the Before Connecting section for more.
- If you have multiple cards to set up, make sure that only one is near your device when you attempt to connect.
- If your card still won't connect to your device, try to reset it, check the Disable Find My and Reset Credit Card Dual section for more.

If you see a message that says your Credit Card Dual is connected to another Apple ID:

- Make sure you have removed Credit Card Dual in the Find My app of the previous Apple ID if you plan to use it with a different Apple ID.

DISABLE FIND MY NETWORK

1. Press and hold the button for 5 seconds until you hear a tone.
2. This will stop sharing the location of this item.

RESET CREDIT CARD DUAL

Shortly click the button five times, then hold the button on the 5th time until you hear a tone. Your card has been successfully reset.

SAFETY AND HANDLING

Important safety information to handle Credit Card Dual with care. It contains sensitive electronic components, including batteries, and can be damaged, impair functionality, or cause injury if dropped, burned, punctured, crushed, disassembled, or exposed to excessive heat or liquid or to environments with high concentrations of industrial chemicals. Don't use a damaged Credit Card Dual.

USE WITH GOOGLE'S FIND MY DEVICE (ANDROID USERS ONLY)

Credit Card Dual is a smart tracker device that uses Google's Find My Device service, paired with the "Google Find My Device" app on Android devices, to quickly and securely locate your personal items on Google Maps. All location information remains private, and even Google cannot access it.

SPECIFICATION

Product Material: Aluminium alloy


Battery Type: Polymer battery

Rated Capacity: 100mAh

Wireless Rechargeable: 5W

Battery life per charge: 4-6 months

Size: 85x54x2.6mm

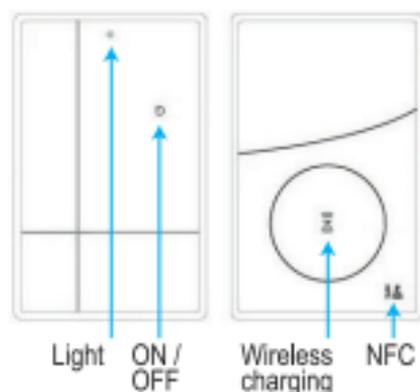

LIGHT INDICATOR

Switch on/off	Blue light flashes for on, flashes twice for off
Wireless Charging	Red light keeps on
Fully Charged	Light turns off
Reset	Blue light flashes

BEFORE YOU START

- Credit Card Dual only supports the **Google Find My Device** app. Please make sure to download and install this app from the **Play Store** before use.
- The device is compatible only with Android devices running Android 9 or higher. Credit Card Dual does not support Huawei devices.
- Once Credit Card Dual is paired with a device, it will be locked and cannot be paired with another device.

- Please follow this step and finish the set up after you download the Google Find My Device app. Select **Find your offline devices** and choose **With network in all areas**.

QUICK START

ADD CREDIT CARD DUAL

1. Make sure your phone's Bluetooth and network are turned on.
2. Press the button once to turn on Credit Card Dual.
3. Bring Credit Card Dual close to your Android device and wait for the pop-up to show "MiCard Pro". (Remark: If no pop-up appears, please restart your phone and try again).
4. Tap **Connect**, read and accept the prompts to complete the pairing.
5. In the **Google Find My Device** app, select "MiCard Pro" to customize the device name and category.

RESET CREDIT CARD DUAL

1. Open the **Google Find My Device** app, select "MiCard Pro". Tap the **Settings** button, then tap **Remove from Find My Device** and confirm.
2. After removing it, press the Credit Card Dual button 6 times rapidly, and when you hear a long beep, the device will be reset.

Note: Please power on the Credit Card Dual and remove the device from the **Google Find My Device** app before resetting.

MANUAL SET UP (IF YOU MISS THE POP-UP)

1. Open **Settings**.
2. Select **Google**.
3. Click on **All Services**.
4. In the **Connected Devices & Sharing** menu, select **Devices**.

5. Enable **Scan for Nearby Devices**.
6. "MiCard Pro" will appear in the list of available nearby devices.
7. Click on it and follow the on-screen instructions to complete the connection.

FUNCTION DESCRIPTION

FIND NEARBY

In the **Google Find My Device** app, select your Credit Card Dual and tap **Play Sound** to locate your device. Once found, tap **Stop Sound** to silence the device.

FIND FAR AWAY

In the **Google Find My Device** app, select your Credit Card Dual and tap the device to view its location.

To navigate to the location, tap **Get Directions** to open map navigation.

ENABLE LOST MODE

In the **Google Find My Device** app, select your Credit Card Dual and tap **Mark as Lost**.

Add your contact information and you will get notified if the Find My Device network locates it.

CREDIT CARD DUAL LOCATION SHARING

In the **Google Find My Device** app, select your Credit Card Dual, then tap **Share Device**.

CONNECT TO ANOTHER PHONE

If you wish to connect your Credit Card Dual to another phone, you must first remove it from the current Google Find My Device.

CREDIT CARD DUAL

MANUAL

(2014/53/EU art. 10-8) (2014/53/EU art. 10-9 Förenklad försäkran om överensstämmelse) C Two Products AB försäkrar härmed att denna produkt uppfyller de väsentliga kraven och andra relevanta villkor i direktiv 2014/53/EU. Den fullständiga EU-försäkran om överensstämmelse finns tillgänglig på: usb.nu – sök på artikelnummer: Artikelnummer: 11357 Modell: HD-P16-E Frekvensområde 2402–2480 MHz/ Maximal radiofrekvens effekt: 2,02 dBm



Elektriska och elektroniska apparater får inte kasseras i hushållet avfall enligt det europeiska WEEE-direktivet. Deras komponenter måste återvinnas separat eller kasseras separat eftersom giftigt och farliga komponenter, om de kasseras på fel sätt, kan orsaka bestående skada till hälsa och miljö.

Som konsument är du enligt lagen om elektrisk och elektronisk utrustning (ElektroG) skyldig att kassera elektrisk och elektronisk utrustning ordentligt i slutet av sin livslängd. Kontakta din lokala avfallshantering företag.

Med CE-märkningen förklarar vi att produkten är grundkraven och riktlinjer för europeiska förordningar.

C Two Products AB
Ridbanegatan 4, 213 77 Malmö, Sweden
Tillverkad i Kina



SYSTEMKRAV:



Works with
Apple Find My

iOS® 14.5 och iPhone® 6S eller nyare



Works with Android
Find Hub

Android 9 eller nyare

ANVÄND MED APPLES FIND MY-APP (ENDAST APPLE-ANVÄNDARE)

Du kan lägga till ditt Credit Card Dual i Hitta-appen på din iPhone eller iPad. När du har glömt något, hjälper Hitta-nätverket – hundratals miljoner anslutna enheter världen över – dig att spåra din enhet. Och det skyddar din integritet i varje steg.

SPECIFIKATIONER

Produkt Material: Aluminiumlegering


Batterityp: Polymerbatteri

Kapacitet: 100mAh

Trådlös laddning: 5W

Batteritid per laddning: 4-6 månader

Storlek: 85x54x2.6mm

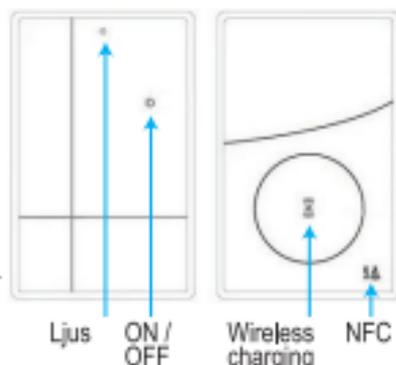

NFC INSTRUKTIONER


Precis som dina andra Apple-enheter kan Credit Card Dual sättas i förlorat läge. När den sedan upptäcks av en iOS-enhet i nätverket får du automatiskt en notis. Du kan också ställa in så att någon kan få din kontaktinformation genom att hålla smartphone mot ditt kort - samma teknik som används för att betala med mobilen.



Endast du kan se var ditt Credit Card Dual är. Din platsdata och historik lagras aldrig på själva kortet. Enheter som vidarebefordrar kortets plats förblir också anonyma, och platsinformationen är krypterad hela vägen. Inte ens Apple vet var ditt kort är eller vilken enhet som hjälper till att hitta det.

TRÅDLÖS LADDNING

1. Placera Credit Card Dual korrekt på den trådlösa laddaren - se till att kortets laddningsport ((⚡)) är centrerad över mitten av laddaren.
2. Lampan börjar blinka grönt när laddningen påbörjas. Om den inte gör det, justera positionen på Credit Card Dual.

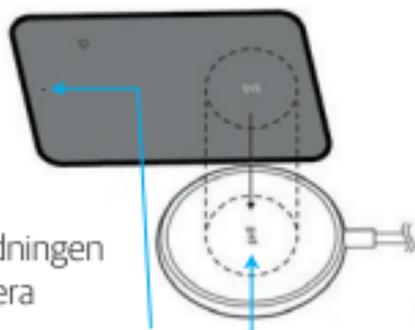

LJUSSIGNAL

Starta/stäng av	Blått ljus blinkar vid start, blinkar två gånger vid avstängning
Trådlös laddning	Rött ljus lyser konstant
Fulladdad	Ljus släcks
Återställning	Blått ljus blinkar

INNAN ANSLUTNING

- En iPhone eller iPad med iOS 14.5 eller iPadOS 14.5 eller senare.
- Inloggad med Apple ID.
- **Hitta** aktiverat.
- Bluetooth påslaget.
- Stabil Wi-Fi- eller mobildataanslutning.
- Platstjänster aktiverade: Gå till Inställningar > Integritet > Location Services.
- För att använda Exakt platsinformation och få den mest exakta platsen för ditt kort: Gå till **Inställningar > Integritet > Platstjänster**, scrolla ner och tryck på **Hitta**. Välj **När appen används** och aktivera Exakt platsinformation.

LÄGG TILL DIN ENHET

1. Tryck på knappen på Credit Card Dual - du kommer höra ett ljud.
2. Öppna Hitta-appen, tryck på +, och välj Lägg till annat objekt.

3. Tryck på anslut, ge ditt kort ett namn och välj en emoji, tryck sedan på Fortsätt.
4. För att registrera kortet till ditt Apple-ID, tryck fortsätt igen.
5. Tryck på Klar - nu kan du fästa ditt kort på ett objekt och se det i Hitta-appen.

Om du inte kan konfigurera din Credit Card Dual:

- Kontrollera att kortet är redo för konfiguration - se avsnittet Innan Anslutning.
- Om du har flera kort att konfigurera, se till att endast en är i närheten av din enhet vid anslutning.
- Om kortet fortfarande inte ansluter, försök att återställa det. Se avsnitten Inaktivera Hitta-nätverket och Återställ Credit Card Dual.

Om du ser ett meddelande om att din Credit Card Dual är kopplad till ett annat Apple ID:

- Kontrollera att kortet har tagits bort från Hitta-appen på det tidigare Apple-ID:t om du vill använda den med ett nytt.

INAKTIVERA HITTA-NÄTVERKET

1. Håll ned knappen i 5 sekunder tills du hör en ton.
2. Detta stoppar platsdelningen för denna enhet.

ÅTERSTÄLL CREDIT CARD DUAL

Tryck snabbt på knappen fem gånger. Håll sedan in knappen vid det femte trycket tills du hör en ton. Ditt kort har nu återställts.

SÄKERHET OCH HANTERING

Viktig säkerhetsinformation - hantera Credit Card Dual varsamt. Den innehåller känsliga elektroniska komponenter, inklusive batterier, som kan skadas, sluta fungera eller orsaka skada om den tappas, bränns, punkteras, krossas, monteras isär eller utsätts för extrem värme, vätskor eller miljöer med höga koncentrationer av industrikemikalier. Använd aldrig en skadad Credit Card Dual.

ANVÄND MED GOOGLE'S FIND HUB (ENDAST FÖR ANDROID-ANVÄNDARE)

Credit Card Dual är en smart spårningsenhet som använder Googles Find Hub-tjänst i din Android-enhet för att snabbt och säkert lokalisera dina personliga tillhörigheter via Google Maps.

All platsinformation förblir privat - inte ens Google har tillgång till den.

SPECIFIKATIONER

Produkt Material: Aluminiumlegering


Batterityp: Polymerbatteri

Kapacitet: 100mAh

Trådlös laddning: 5W

Batteritid per laddning: 4-6 månader

Storlek: 85x54x2.6mm

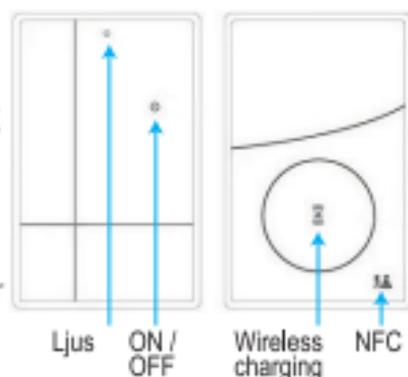

LJUSSIGNAL

Starta/stäng av	Blått ljus blinkar vid start, blinkar två gånger vid avstängning
Trådlös laddning	Rött ljus lyser konstant
Fulladdad	Ljus släcks
Återställning	Blått ljus blinkar

INNAN DU BÖRJAR

- Credit Card Dual stöder endast **Google Find Hub**-appen. Se till att du laddar ner och installerar appen från **Play Store** innan användning.
- Enheten är endast kompatibel med Android-enheter som kör Android 9 eller senare. Credit Card Dual stöder inte Huawei-enheter.
- När Credit Card Dual har parats med en enhet kommer den att låsas och kan inte parats med en annan enhet.

- Följ dessa steg och slutför installationen efter att du har laddat ner appen Google Find Hub.
Välj **Hitta dina offline-enheter** och välj alternativet **Med nätverk i alla områden**.

SNABBSTART

LÄGG TILL CREDIT CARD DUAL

1. Kontrollera att telefonens Bluetooth och nätverksanslutning är aktiverade.
2. Tryck en gång för att slå på Credit Card Dual.
3. För enheten nära din Android-telefon och vänta tills en popup-ruta visas med "MiCard Pro". (**Obs:** Om inget pop-up-fönster visas, starta om telefonen och försök igen.)
4. Tryck på **Anslut**, läs och godkänn meddelandena för att slutföra parkopplingen.
5. I appen **Google Find Hub**, välj "MiCard Pro" för att anpassa enhetens namn och kategori.

ÅTERSTÄLL CREDIT CARD DUAL

1. Öppna appen **Google Find Hub**, välj din Credit Card Dual. Tryck på inställningsikonen, välj sedan **Ta bort från Hitta min enhet** och bekräfta.
2. Efter att enheten har tagits bort, tryck snabbt på knappen på Credit Card Dual 6 gånger.

Obs: Se till att Credit Card Dual är påslagen och att den har tagits bort från **Google Find Hub** innan du återställer.

MANUELL INSTALLATION (OM POPUP-FÖNSTRET INTE VISAS)

1. Öppna **Inställningar**.
2. Välj **Google**.
3. Klicka på **Alla Tjänster**.
4. I menyn **Anslutna enheter & delning**, välj **Enheter**.

5. Aktivera **Sök efter enheter i närheten**.
6. "MiCard Pro" kommer att visas i listan över tillgängliga enheter i närheten.
7. Tryck på den och följ instruktionerna på skärmen för att slutföra anslutningen.

FUNKTIONSBESKRIVNING

HITTA I NÄRHETEN

I appen **Google Find Hub**, välj din Credit Card Dual och tryck på **Spela upp ljud** för att lokalisera enheten. När du har hittat den, tryck på **Stoppa Ljudet** för att stänga av signalen.

HITTA PÅ LÅNGT AVSTÅND

I appen **Google Find Hub**, välj din Credit Card Dual och tryck på enheten för att se dess position.
För att navigera till platsen, tryck på **Få vägbeskrivning** för att öppna kartnavigationen.

AKTIVERA FÖRLORAT LÄGE

I appen **Google Find Hub**, välj din Credit Card Dual och tryck på **Markera som förlorat**.
Lägg till din kontaktinformation - du får en avisering om Find Hub-nätverket lokaliserar enheten.

DELNING AV PLATS FÖR CREDIT CARD DUAL

I appen **Google Find Hub** app, välj din Credit Card Dual, och tryck sedan på **Dela enhet**.

ANSLUT TILL EN ANNAN TELEFON

Om du vill ansluta din Credit Card Dual till en annan telefon måste du först ta bort den från den nuvarande Google Find Hub.